

| 版本 | 更改内容    | 更改时间      |
|----|---------|-----------|
| A0 | 正稿      |           |
| A1 | 增加第9点内容 | 2026.5.26 |

- 此文档为A1版本
- 尺寸：222\*212mm

# Manual Instruction

Model No.: C01RF/C02RF/C03RF/C04RF/C05RF  
C01W/C02W/C03W/C04W/C05W


| Model No.   | 2.4G RF remote | WiFi | Bluetooth |
|-------------|----------------|------|-----------|
| C01RF~C05RF | ✓              | X    | X         |
| C01W~C05W   | ✓              | ✓    | ✓         |

## 1. Parameters

| Model No.         | C01RF~C05RF               | C01W~C05W      |
|-------------------|---------------------------|----------------|
| Support:          | 2.4GHz RF                 | WiFi&2.4GHz RF |
| Input Voltage:    | DC12~24V                  |                |
| Output:           | 6A/Channel; Total 12A Max |                |
| Ta:               | -25~40°C                  |                |
| Size:             | 74.5*35.6*16.5mm          |                |
| Control Distance: | 30M                       |                |


### ▼ Single Color LED Controller

**Connection Diagram:**  
Input Voltage=Output Voltage

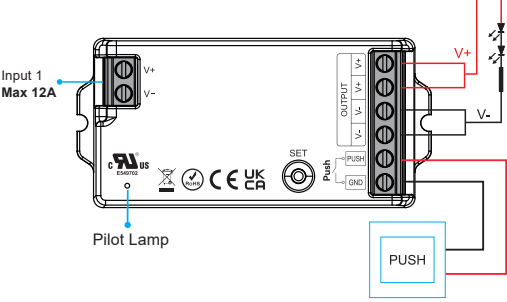


### ▼ Dual White LED Controller

**Connection Diagram:**  
Input Voltage=Output Voltage

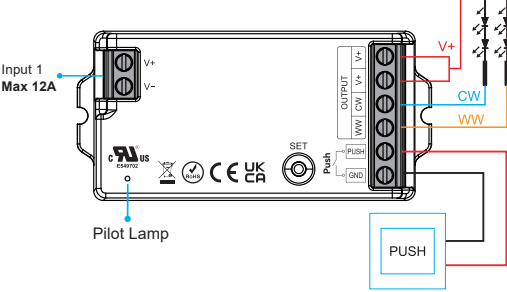


### ▼ RGB LED Controller

**Connection Diagram:**  
Input Voltage=Output Voltage

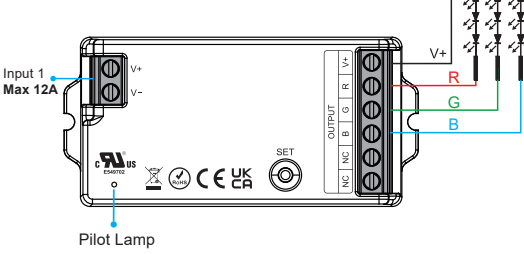


### ▼ RGBW LED Controller

**Connection Diagram:**  
Input Voltage=Output Voltage

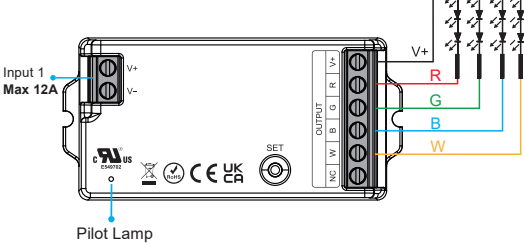


### ▼ RGB CCT LED Controller

**Connection Diagram:**  
Input Voltage=Output Voltage

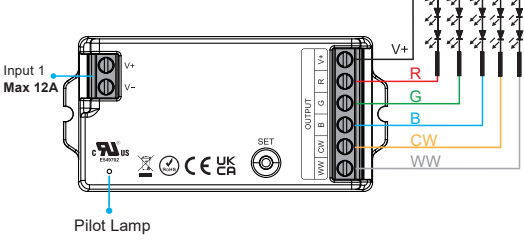

## 2. Connection Steps

The terminal is intended for both solid and stranded or just solid wire

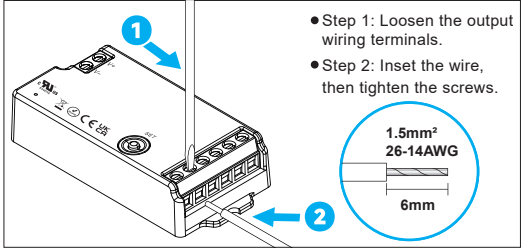

| Indicator LED-Indicates network connection status |                                                                  |                                                     |                                                                                                     |
|---------------------------------------------------|------------------------------------------------------------------|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| Indicator LED color                               | red indicator stays on continuously                              | red indicator flashes                               | green indicator stays on continuously                                                               |
| Network connection status                         | The controller is disconnected from both network and the router. | The controller is waiting for network configuration | The controller's WiFi has been configured and connected to the network(all functions are available) |

(This table for WiFi LED controllers only.)


## 3. PWM Frequency Switching

Press and hold the SET button for more than 15 seconds:

| Indicator light color | Pilot lamp                                                                                    | Pilot lamp                                                                                                     |
|-----------------------|-----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| PWM frequency         | When the green indicator flashes slowly, the controller switches to 2KHz high-frequency mode. | When the red indicator flashes slowly, the controller switches to 1KHz low-frequency mode (default frequency). |

## 4. Compatible Remote Controller:

Compatible with these remote controls(Purchased separately). For more details, pls read the remote instruction.

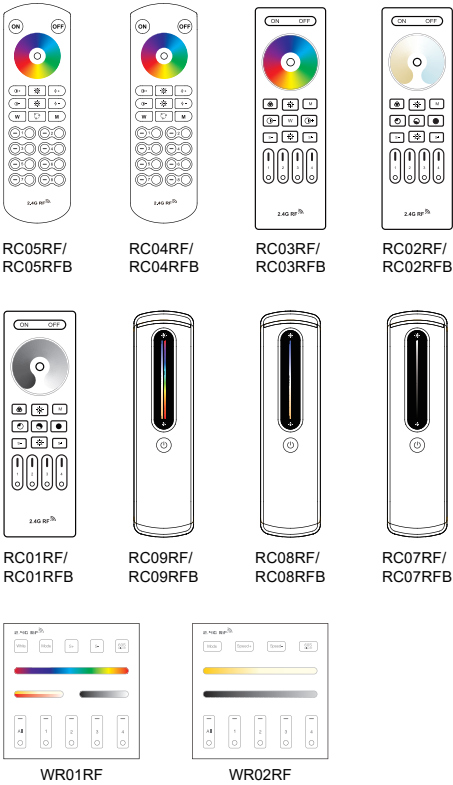

## Linking with remote control

**First way:**  
Press and hold the "SET" button for more than 3 seconds until the light flickers once, indicating that the controller has entered linking mode. Next, quickly press the any zone "ON" button on the remote control 3 times. If the light flickers 3 times in response, this confirms that the linking process was successful.

**Second way:**  
When the light is on, turn it off and wait 10 seconds, then turn it back on. Quickly press any zone "ON" button on the remote 3 times within 5 seconds. The light will flash 3 times, indicating a successful pairing.

## Unlinking with remote control

**First way:**  
Press and hold the "SET" button for over 3 seconds until the light flickers once. Then, press the linked zone "ON" button on the remote 5 times within 5 seconds. If the light flickers slowly 10 times, the unlinking is successful.


**Second way:**  
When the light is on, turn it off and wait 10 seconds, then turn it back on. Quickly press linked zone "ON" button on the remote 5 times within 5 seconds. The light will flash 10 times, indicating a successful unlinking.

## 5. Signal transmitting

One strip controller can transmit the signals from the remote control to another controller within 30m, as long as there is a strip controller within 30m,the remote control distance can be limitless.

## 6. Mode synchronization

Different controllers can work synchronously when they are started at different times, controlled by the same remote, under same dynamic mode and with same speed.

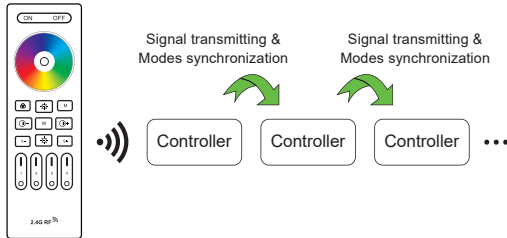

## APP Control for WiFi Controller

### 7. Smartphone APP WiFi Control Instruction

#### 1. Download and install [Smart Life] or [Tuya Smart] APP

Search for [Smart Life] in Apple or Google store or scan following QR code to download and install the app.

Please click " Register " button to create account while using it in the first time, Log in directly if you already had account.




### 2. Link to Smartphone&Reset Devices

- (1). Make sure Smartphone is working on WLAN network.
- (2).Long press"SET" button,or switch ON-OFF power 4 times (ON-OFF-ON-OFF-ON-OFF-ON),when the white light blink, the device come into link or reset mode.
- (3).Open the sign-in APP, it will discover the devices automatically, (If it's not discovered, please click"+" on the top right corner, and select "add new device" manually) follow the steps and complete linking;




- (4). Added devices will be displayed on homepage after linking successfully,then click the device and go into the control interface for more operation.

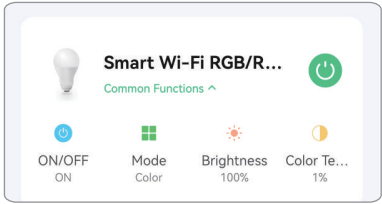

**Note:** Please complete the linking within 3 minutes, after 3 minutes, the devices will not on linking mode, you have to do above " 2 " step, and link again.

## 8. Bluetooth Control:

1. Initial Network Setup: Choose Bluetooth direct connection mode directly. Refer to the figure below for operation.

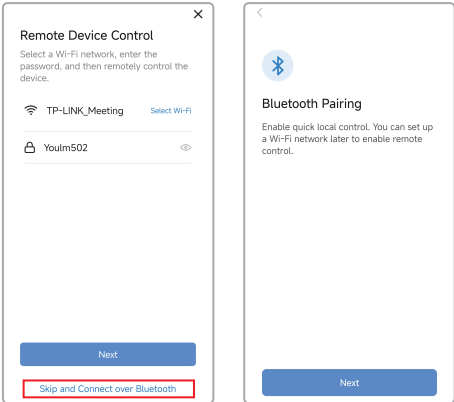


2. Auto-switch When WiFi Fails: Once the device is paired via WiFi, it will automatically switch to Bluetooth for short-range control if the router is accidentally powered off, as long as your phone's Bluetooth is on.

**Note:**  
Bluetooth-only connection (without WiFi) supports short-range basic control only. Advanced features (grouping, scheduling, third-party voice integration, etc.) are disabled in this mode.

## 9. PUSH Switch instruction (for C01RF,C02RF,C01W and C02W)

### 9.1. PUSH Switch Connection Diagram

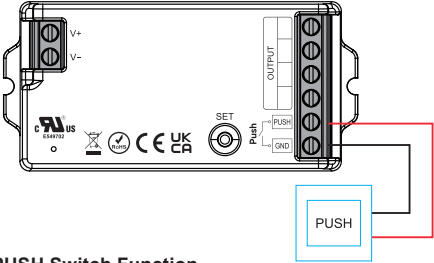

### 9.2. PUSH Switch Function

#### 2.1 Dimming Function:

- (1) Short press PUSH Switch: Turn ON or Turn OFF the light.
- (2) Long press PUSH Switch: Dimming the brightness smoothly. Long press Push Dimmer, then loosen the Push Dimmer, then long press again,switch increase brightness or decrease brightness

#### 2.2 Active Link/Unlink mode to remote:

Short press Push Switch over 4 times within 5 second, make the device into Link/Unlink Mode. The Link/Unlink will last for 5 seconds.

#### 2.3 Smart Link to APP

Long press Push Switch for over 15 seconds, under light OFF mode.

## Attention

1. Please check whether the input voltage of the constant voltage power supply is in accordance with the controller, and please check the connection of both the cathode and anode.
2. The working Voltage is DC12~24V,the controller will be broken if the voltage is higher than 24V.
3. Non-professional user cannot dismantle the controller directly, otherwise, it may cause fire and electric shock.
4. The working temperature(Ta)is-25~40 C ; Do not use the device to direct sunlight, moist and other high temperature area.
5. Please do not use controller around the mental area and high magnetic field, otherwise,it will badly affect the control distance.
6. When the device load to 15A,wire diameter must be over 1.5mm².
7. When the device load over 10A , the connecting cable must be shorter than 40cm long from DC port to LED strip.
8. Please install the device on good dissipation area.

